

WahWah Face Mask

This mask is washable and reusable for 30 to 180 days depending on hours of use per day. The filter is normally good for 6 to 8 hours of use. Mask without filter installed can be cleaned and sterilized in boiling water or other means. The package includes 30 replaceable filters. It also includes a headband in case the ear loop is uncomfortable or not desired. It has been made with food grade silicon which is extremely durable material that will not deform, shrink, crack or become worn out under normal circumstances.

Warning: This mask is not intended for medical applications.

Warning: This mask must be cleaned with soap and water or in boiling water before first use. Once cleaned, you must install one of the filters supplied in the package. See procedure below.

Product Images



Mask features:

- This mask shell is made with food grade silicone, material normally suitable for cooking and serving food.
- Unlike cloth masks, it will not irritate or interfere with lip movement while talking.
- Mask comes with 30 high quality multilayer filters which are easy to replace.
- Does not contain any toxic material such as BPA, Latex, Lead, Phthalates, etc.
- It is recyclable, non-toxic, odorless, non-allergenic, light weight, easy to transport.
- Available in many colors; initially only available in white color. For now color selection available on custom orders.
- Comes in different sizes such as small for children, medium for young adults and large for adults.
- Can withstand high temperatures like boiling water for prolonged period of time.
- In most cases mask will prevent moist air coming from the top to fog up glasses in humid environment.
- If handled with care it could last for months of everyday use. It includes 30 filters each good for 8 hours of use or until it gets wet.
- It is highly recommended to wash with boiling water each time the filter needs replacing to sterilize and keep it fresh.

- When not in use, you can put this mask in pocket however doing so will dislodge the filter. Make sure filter is securely in place and fit tightly before future use.


Caution: This mask can help reduce inhalation exposures to certain airborne particles but may not completely eliminate the risk of contracting or transmitting disease or infection. Social distancing should still be observed.

Important Procedures

- It is recommended to wash hands before handling the mask.
- Prior to cleaning the mask, please make sure the filter (B) is not installed and the filter holder (C) is also cleaned at the same time.
- Before using the mask each day, it is highly recommended to clean the mask. Best way to clean and sterilize the mask is to submerge the mask in a clean pot of boiling clean water for 2 to 5 minutes.
- Discard the old filter at the end full day of use or sooner if you feel the filter gets wet or dirty in a dusty environment.

Mask Assembly

Unless shipped in bulk, the mask will be partially assembled. The filter will need to be installed or replaced for the life of the mask before each day.

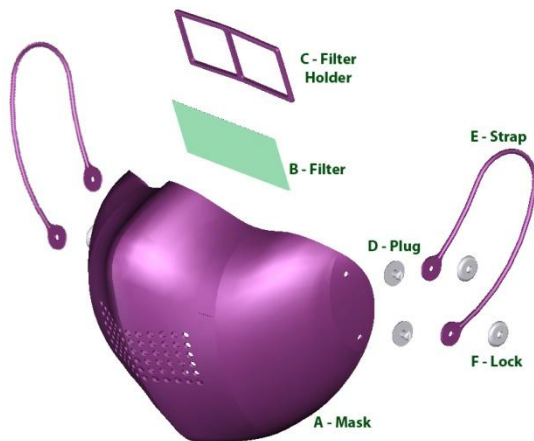

1. Insert the plug (D) from the inside of the mask (A).
2. Attach one end of the strap (E) to the plug (D) on the outer surface of the mask.
3. Push in locking piece (F) to secure the strap to the mask.
4. Repeat steps 1 to 3 for the other end of the strap.
5. Repeat steps 1 through 4 on the other side of the mask.

Installing the filter

1. Place the mask on a clean sterilized surface with the inside facing up.
2. Remove the filter holder (C) from the mask.
3. If a filter (B) has been fitted, pinch and remove old filter from the mask and discard it.
4. If the filter is uneven size, wider side is on top (near the nose end of the mask).
5. Place a fresh filter (B) on top of the air holes in the mask and make





Superior Home Automation, Corp
733 Delaware Rd. #124
Buffalo, NY, 14223

- sure it is snug fit on all sides.
6. Place the filter holder (C) on top of the filter and press it on all sides to fit in the grooves.
 7. Examine the filter under the holder and make sure that there are no gaps on any side.